

Fuelfix FMS


Measure, Control & Conserve Fuel

SIM Card requirements for the Fuelfix FMS cellular module

The Fuelfix FMS module uses a 4G/5G data enabled SIM to send data to your website account.

Below are the details of what is required for the card:

- **Application Description:** A machine to machine application where data is automatically sent to a website
- **Data Capacity:** Minimum of 500MB per month (0.5GB)
- **SIM PIN:** The SIM card should be unlocked. The SIM PIN / PIN Code / SIM card security, should be disabled. This may be done when the card is supplied, but can also be set by fitting the card into a phone and using the phone settings menu to turn off this functionality
- **Physical Size:** To fit into the module the SIM must be a Nano SIM.

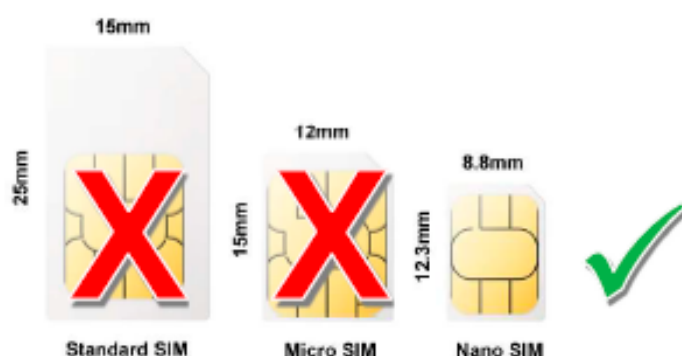

- **Service Provider/ Plan:** All service providers can provide a data SIM and plans vary between suppliers.
- Telstra have IoT (Internet of Things) the current evolution of M2M (machine to machine) data plans, which are specifically designed for this type of application. Details can be found on Telstra's Website.
- We recommend any data plan that provides at least 0.5 GB per month
- **APN Configuration:** The unit is set to auto by default. If your cell provider requires a specific APN, you can set this in the Fuelfix FMS menu as follows:
 - Hold <CLR> and <ENT> until the display reads "Enter admin or installer PIN"
 - Enter your Admin or Installer PIN number and press <ENT>
 - Press <9> for More and then <2> for Network
 - Press <1> for Access Point, and then enter the service providers APN